

# PRIRUČNIK

## USER GUIDE

PERFORMANSE

IZDRŽLJIVOST

ZADOVOLJSTVO

SIGURNOST

Upute za uporabu možete naći na:

[www.ski-mojo.ski](http://www.ski-mojo.ski)

i na

[www.ski2go.eu](http://www.ski2go.eu)



SVE ZA SPORT turistička agencija d.o.o.

Braće Cvijića 32, 10000 Zagreb

OIB: 44430332290

+385 98 562 431

dean@svezasport.hr

info@ski2go.eu

[www.ski2go.eu](http://www.ski2go.eu)

► [www.ski-mojo.ski](http://www.ski-mojo.ski)

Čestitamo Vam na novom  
Ski-Mojo-u. Pružit će Vam  
dugogodišnje uživanje u skijanju.

Prijavite svoju garanciju na:  
[http://www.ski-mojo.ski/  
garantie](http://www.ski-mojo.ski/garantie)

Toplo vam preporučujemo da  
registrirate svoj proizvod na  
[http://www.ski-mojo.ski/  
guarantee](http://www.ski-mojo.ski/guarantee)

kako biste iskoristili garanciju, bili  
informirani o budućim inovacijama  
i iskoristili najbolju moguću uslugu  
za svoj Ski-Mojo.

*Congratulations on your  
new Ski-Mojo. It should  
provide you with many  
years of skiing enjoyment.*

*We strongly recommend  
you register your product  
at [http://www.ski-  
mojo.ski/guarantee](http://www.ski-mojo.ski/guarantee) to  
benefit from the  
guarantee, to be  
informed about future  
innovations and to  
benefit from the best  
possible service for your  
Ski-Mojo.*



Pojas i konektor  
Harness + harness connector



Prekidač za aktivaciju  
Activation switch



Podupirači za koljena s mojo  
zglobovima  
Knee-supports with the mojo  
hinges in them



Clamp-on Konektori  
Clamp-on Ball-Studs



Konektori  
Ball-studs





1. Priručnik - *User guide*  
 2. Lijeva noga – *Left leg*  
 3. Desna noga - *Right leg*  
 4. Pojas - *Harness*  
 5. Kvačice konektori (*Clamp-On Ball-studs*)  
 6. Okrugli konektori (*Ball-studs*)  
 7. Blokatori štapova (*Rod blockers*)  
 8. Imbus ključ (*Allen key*)

**Radi vaše sigurnosti pažljivo pročitajte ove upute i postupno se upoznajte s mogućnostima i performansama Ski-Moja.**

**For your safety please carefully read these instructions and then become progressively acquainted with Ski-Mojo capabilities and performances.**

## Prije prvog postavljanja pripremite sljedeće dijelove:

**Before fitting the first time prepare the following parts:**

- Dvije mojo nožice  
*Two Neoprene Knee-Supports*
- Pojasevi s kopčama na svakoj strani  
*The harness composed of a wide belt and with a clip on each side*
- Dva konektora s kvačicama ⑤  
*Two clamp-on ball-studs*
- Imbus ključ ⑧  
*The 2,5 mm Allen key*

Nakon kupnje, Ski-Mojo je prilagođen minimalnom oprežnom položaju šarki i sklopki u položaju "isključeno", tako da opruge ne budu uključene. Prvo postavljanje treba obaviti s prekidačima u položaju "isključeno". Traka za pojaseve postavlja se na najčešće korištenu duljinu. Jednom kada je vaš Ski-Mojo postavljen na vašu veličinu i težinu i na svoje ste skijaške čizme pričvrstili nosače kuglica; lako se stavlja i skida iz dana u dan s čičkom i tračnicama.

*Upon purchasing your Ski-Mojo is adjusted to the minimum spring setting of the mojo hinges and the switches in the "off" position, so that the springs are not engaged. The initial fitting should be done with the switches in the "off" position. The Posture-Strap of the Harness will be set to the most commonly used length. Once your Ski-Mojo has been set to your size and weight and you have attached the Ball-Studs to your ski boots; it is easily put on and taken off day-to-day with Velcro and snap-fittings.*

## ① POSTAVITE SKI-MOJO PREMA VAŠOJ TEŽINI Set the Ski-Mojo to your weight

Prvo, morate pogledati koja je opruga ugrađena u vaš sustav:

- Ski-Mojo sa **zlatnim** oprugama, dolazi s **crnim** prekidačima.
- Ski-Mojo sa **srebrnim** oprugama, dolazi sa **sivim** prekidačima.
- Ski-Mojo s **plavim** oprugama, dolazi s **plavim** prekidačima.

**①** Pogledajte svoju težinu na tablici i utvrdite koliko pomicanja trebate okrenuti podešavaču.

**②** Za svaku nogu (s desne i lijeve strane) otkopčajte čičak na krajevima traka za potporu koljena, zatim odmotajte naramenice i savijte krajeve vrpca na vrpce natrag na sebe (samo tako da se ne lijepe za sve dok rade fitting). Povucite neopren u jednu stranu da biste osvjetlili podešavanje snage i indikator.

**③** Umetnute kraj imbus ključa u otvor s desne strane dviju vidljivih rupa u Adjusteru bačve (kada ga gledate s prorezom za proljeće s oprugom za podešavanje opruge) i koristeći Allen ključ kao polugu (nemojte okrenite Allen ključ - neće ništa učiniti). Zakrenite podešavanje napajanja sve dok rupa s desne strane (da je Allen ključ) sada nije rupa na lijevoj strani. Izvucite Allen ključ iz rupe i ponovite onoliko puta koliko je naznačeno na grafikonu.

*First, check which spring is installed in your Ski-Mojo :*

- *Ski-Mojo with **Gold** spring comes with **black** switches.*
- *Ski-Mojo with **Silver** spring comes with **grey** switches.*
- *Ski-Mojo with **Blue** spring comes with **blue** switches.*

**①** *Look your weight up on the chart and establish how many Movements you need to turn the adjuster.*

**②** *For each leg (right and left), undo the Velcro on the ends of the Knee-Support straps, then unwrap the straps and fold the Velcro ends of the straps back on themselves (just so they don't stick to everything while doing the fitting). Pull the Neoprene to one side to expose the Power Adjuster and Indicator.*

**③** *Insert the end of the Allen key in to the hole on the right of the two visible holes in the Barrel Adjuster (when looking at it with the "Spring Adjuster Indicator Slot" above it) and using the Allen key as a lever (do not turn the Allen key - it won't do anything). Rotate the Power Adjuster until the hole on the right (that the Allen key is in) is now the hole on the left. Take the Allen key out of the hole and repeat as many times as indicated on the chart.*



## TABLICA TEŽINE I JAČINE – WEIGHT AND POWER CHART

**GOLD**

123	271	24
121	266	23
119	262	22
117	257	21
115	253	20
113	249	19
111	244	18
109	240	17
107	235	16
105	231	15
103	227	14
101	222	13
99	218	12
97	213	11
95	209	10
93	205	9
91	200	8
89	196	7
87	191	6
85	188	5
84	185	4
83	182	4
82	180	3
81	178	3
80	177	2
79	174	2
77	170	1
76	168	0



Umetnите kraj imbus ključa u rupu s desne strane i upotrijebite imbus ključ kao polugu za rotiranje Power Adjuster-a dok se rupa s desne strane ne pomakne s lijeve strane. Ponovite za svaki pokret. Koraci 1 do 4 predstavljaju 1 pokret.

Insert the end of the Allen key in to the hole on the right and use the Allen key as a lever to rotate the Power Adjuster until the hole on the right has moved to the left. Repeat for each movement. Steps 1 to 4 above represent 1 movement.

**SILVER**

Kg	Lb	24
87	191	23
85	188	22
84	185	21
83	182	20
82	180	19
81	178	18
80	177	17
79	174	16
77	170	15
76	168	14
75	165	13
73	162	12
72	159	11
71	156	10
69	153	9
68	150	8
67	147	7
65	144	6
64	141	5
63	138	4
61	135	3
60	133	2
59	130	1
57	127	0

**BLUE**

Kg	Lb	24
62	136	23
61	135	22
60	133	21
59	130	20
58	128	19
57	127	18
56	124	17
55	121	16
54	118	15
53	117	14
52	115	13
51	112	12
50	109	11
49	108	10
48	106	9
47	103	8
46	101	7
46	101	6
44	98	5
43	95	4
42	92	3
41	89	2
40	88	1
39	86	0
38	83	0

Primjer :

Za težinu od 63 kg, postavite Srebrnu oprugu sa 6 pokreta ulijevo. Indikator pin će ići do 2. marke.

Example:

For a weight of 63 kg, set the Silver spring with 6 movements to the left. The indicator pin will go to the 2nd mark.

**2. POSTAVITE KOPČE NA SVOJE SKI ČIZME***Put the clamp-on ball-studs on to your ski boots*

Dvije kopče koje dolaze sa Ski-Mojoom imaju tri funkcije :

- Da testirate Ski-Mojo
- Omogućiti upotrebu s iznajmljenom obućom
- Utvrđite pravilno postavljanje krajnjih kopči

**①** Pričvrstite prvitet na stražnju stranu vaše skijaške čizme (**rub pričvršćenja 20mm na vanjskoj strani čizme**). Kao vodilju možete koristiti drugu stezaljku (široku 20 mm).


**②** Držite vijak s imbus ključem sve dok se čvrsto ne uhvati.

The two Clamp-on Ball-studs allow you:

- To test the Ski-Mojo
- To use Ski-Mojo with rental boots
- To properly establish the position of the final Ball-studs

**①** Hook the attachment on to the back of your ski boot (**edge of attachment 20mm to outside of boot**). You can use the other clamp (which is 20mm wide) as a guide.

**②** Do up the screw with the Allen Key until it is gripping firmly.

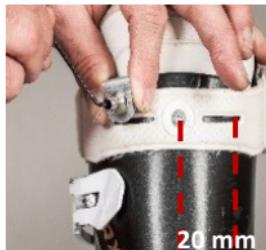

Za Snowboard: Vidi stranicu 12  
*See page 12 for snowboard boots*

**③ INSTALACIJA POJASA – Install the harness**

Preporučujemo da koristite Ski-Mojo ispod hlača, osim prvog dana, kako bi se olakšalo rukovanje.

S elastičnim trakama na dnu glavne trake, zakoračite u pojasa. Podignite pojasa tako da je glavni remen **ispod** stražnjice.

Provjerite položaj Harness konektora. Rupa na dnu trebala bi biti u skladu s vanjskom stranom bedara. Ako je potrebno pomaknuti Harness konektore, skinite čičak i ponovno namjestite na ispravno mjesto (postoje prešivene crvene linije na svakih 5 cm kao smjernice). Možda vam može pomoći prijatelj.

We recommend to use your Ski-Mojo under your pants, except for the first day, in order to facilitate handling.

With the elastic straps at the bottom of the main strap, step into the loops of the harness. Pull the Harness up so that the main strap is **UNDER** your buttocks.

Check the position of the Harness connectors. The hole at the bottom should be in line with the outside of your thigh. If the Harness connectors need to be moved, then peel off the Velcro and re-position in the correct place (there are lines of red stitching every 5cm as a guide). You may be helped by a friend.

Crveni markeri postavljeni na svakih 5 cm pomoći će vam da ih postavite simetrično. Možda vam netko drugi pomogne.


*Once the harness is installed, you can put your ski-boots on.*

Nakon postavljanja i podešavanja remena, stavite i zategnite skijaške čizme.

Zakoračite unutar remenja  
*Step into the loops of the harness*



Glavni remen treba biti ispod stražnjice  
*The main strap should be under your buttocks*

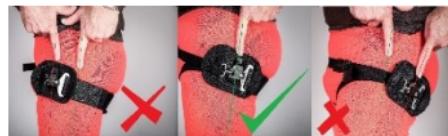

Provjerite položaj Harness konektora  
*Check the position of the Harness connectors*



Po potrebi prilagodite njihov položaj čičkom  
*If needed, adjust their position thanks to the velcro*

**Podešavanje Harness konektora pojasa važan je korak. Nemojte to preskočiti!**  
*Adjustment of the harness is an important step. Do not skip it!*

#### ④ PODEŠAVANJE SKI-MOJO NOŽICA – Fitting your Mojo legs

Vaš Ski-Mojo opremljen je lijevom i desnom nogom (na neoprenu su označene "L" i "R"). Za svaku nogu slijedite ovaj postupak:

1 Otvorite stezaljku svake teleskopske šipke (gornju i donju) i izvucite ih. Potom će se pojavit skala za mjerjenje.

- Postavite do 4 ako ste viši od 1.80m
- Postavite do 2 ako ste niži od 1.80m

Open the clamp of each telescopic rod (upper one and lower one) and slide them out. Graduations will then appear.

- preset to 4 if you are over 1m80 tall
- preset to 2 if you are less than 1m80 tall

Your Ski-Mojo is equipped with a left leg and a right leg ("L" and "R" indicated on the neoprene). For each leg, please follow this procedure:



❷ Gurnite rukavac na kraju donjeg teleskopskog štapa da biste otkrili utičnicu. Stavite utičnicu na kuglični nosač na čizmi i otpustite rukav.



*Slide up the sleeve on the end of the lower telescopic rod to expose the socket. Place the socket on to the ball stud on the boot and release the sleeve.*

❸ Otpustite (otvorite) stezaljku koja drži donji teleskopski štap. Gurnite mojo prema gore dok ne bude uz vaše koljeno, a zatim zatvorite stezaljku.



*Undo (open) the clamp holding the lower Telescopic rod. Slide the pivot of the mojo up until it is alongside your knee and then close (do-up) the clamp.*

❹ Gurnite vrh teleskopske šipke u otvor na dnu konektora pojasa. Ako želite odvojiti nogu od pojasa, samo pritisnite zlatnu tipku na priključnici kabelskog snopa i povucite remen.



*Slide the top of the telescopic rod into the hole in the bottom of the Harness connector. If you want to disconnect a leg from the harness, just press the golden button placed on the harness connector and pull-up the harness.*

❺ Podignite čičak trakicu što je čvršće moguće. Podignite remen za bedro.



*Do up the Velcro shin-strap as tightly as is comfortably possible. Do up the thigh strap.*

❻ Ustanite i otvorite stezaljku koja drži gornju teleskopsku šipku. Zatim podesite duljinu sve dok konektor kabelskog snopa ne bude 5 do 7 cm ispod najšireg dijela struka. Zatvorite stezaljku.



*Stand up and open the clamp holding the upper Telescopic rod. Then adjust the length until the harness connector is 5 to 7 cm below the widest part of the waist. Close the clamp*

**Savjet:** Nakon što postavite teleskopske šipke na duljinu na prvoj nozi, jednostavno možete postaviti teleskopsku šipku druge noge na istu duljinu prije nego je pričvrstite na svoje skijaške čizme.

**Tip:** Once you've set the telescopic rods to length on the first leg you can simply set the telescopic rod of the other leg to the same length before attaching it to your ski boot.

**5. UKLUČIVANJE / ISKLJUČIVANJE – Engage / Dis-engage**

Da biste **uključili** mojo, gurnite prekidače prema dolje - a zatim ispravite noge.

*To switch on (engage) the mojos push the switches down - then straighten your legs.*

Da biste **isključili** mojo, okrenite prekidače prema gore - a zatim ispravite noge.

*To switch off (dis-engage) the mojos flip the switches up - then straighten your legs.*



**SADA MOŽETE UŽIVATI U  
SKI-MOJO EFEKTU**

**YOU CAN NOW ENJOY THE EFFECT OF  
YOUR SKI-MOJO**

**SAVJET - Advice :**

- Isključite Ski-Mojo kada ne skijate – onda kada hodate, vozite ili ste u restoranu.  
*Dis-engage the Ski-Mojo when not skiing, to walk or drive or in a restaurant.*
- Ako je aktiviranje prvih dana teško, ili ako ne možete dovoljno podići nogu, **nemojte forsirati sustav.** Samo uključite prekidač za aktiviranje, ispružite nogu koliko možete i rukom izvucite gornji dio Ski-Mojoa.  
*If activation is difficult during the first days or if you cannot raise your leg enough, don't force the system. Just engage the activation switch, stretch your leg as much as you can and pull up the upper part of your Ski-Mojo with your hand.*

**⑥ KRATAK TEST PRIJE SKIJANJA – A quick test before skiing**


Kada je SkiMojo uključen, savijte koljena na oko 90 stupnjeva (pridržite se za stolicu ili stol radi ravnoteže), a zatim podignite nožne prste svojih skijaških cipela s tla kako biste bili uravnoteženi na petama. Ako ne osjećate da su stopala uključena ili isključena - sklapanje je završeno,

Međutim, ako se noge ispruže prilikom obavljanja ovog testa, morat ćeće pomaknuti spojnica za pričvršćivanje malo dalje prema vanjskoj strani čizama (1 ili 2 mm). Ako su stopala uključena u ovaj test, morat ćeće pomaknuti spojnica za čizme malo dalje prema sredini svojih čizama. Imajte na umu da ovaj test nije potreban za snowboardere.

With the mojos engaged, flex your knees to around 90 degrees (you may want to hold on to a chair or table for balance) then lift the toes of your ski boots a fraction off the ground so that you are balanced on your heels. If you do not feel your feet being turned in or turned out – fitting is complete,

However, if your feet turn-out when doing this test you will need to move the Clamp-on boot fittings a little further towards the outside of your boots (1 or 2 mm). If your feet turn-in when doing this test you will need to move the Clamp-on boot fittings a little further towards the centre of your boots. **Please note that this test is not necessary for snowboarders.**

Once you are happy with the settings – we recommend that you make a note of them on the end of this booklet

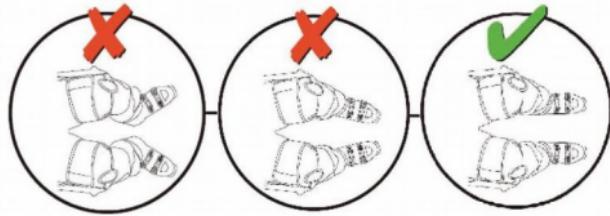

### KADA AKTIVIRATI SKI-MOJO ? When to have your Ski-Mojo switched on or off

Dok skijate - Ubrzo postaje lagano uključivanje i isključivanje po osjećaju prekidača kroz vaše skijaške hlače sa skijaškim rukavicama.

Kao opće pravilo, Ski-Mojo se isključuje kad god nemate skije i uključite kad god imate skije.

Jedina iznimka je kada se vozite sa žičarom. Provjerite jesu li opruge isključene prije nego što se popnete na sjedalo. Ako zaboravite - svi to radimo! nemojte paničariti - jednostavno postavite prekidače u isključeni položaj, a zatim prebacite noge naprijed i prema gore kako biste odvojili opruge. Jednom kada ste na sjedalu, možda ćete poželjeti da ga uključite, dok se krećete. Možete se izvući iz dizala kao što bi to obično radili, a opruge će se aktivirati nakon što izravnate noge ILI neposredno prije nego što se spustite sa stolice, prebacite noge gore da uključe opruge, a kad stolica dođe do krajeva vaših skija prvo dotaknite tlo, a skije će biti gurnute natrag ispod stolice, tako da se lako možete uspraviti i skijati s već pokrenutim SkiMojom.

*While out skiing – It soon becomes second nature to switch on and switch off feeling for the switches through your ski trousers with your ski gloves on.*

*As a general rule you have the Ski-Mojo switched off whenever you do not have your skis on and switched on whenever you do have your skis on.*

*The one exception is when riding a chair lift. You should ensure that the springs are dis-engaged Before you get on to a chair lift. If you forget – we all do ! don't panic – simply put the switches into the off position and then swing your legs forwards and up to disengage the springs. Once you are on the chair lift you may want to put the switches in to the On position in preparation for when you get off. You can either get off the lift as you would normally and the springs will engage once you straighten your legs OR just before you get off the chair, swing your legs up to engage the springs, then as the chair arrives the tails of your skis will contact the ground first and the skis will be pushed back under the chair so that you can easily stand up and ski off already powered up.*

## ⑦ UGRADITE MOJO NOŽICE NA SVOJE SKI ČIZME

*Install the final ball studs on your ski boots*

Nakon što ste u potpunosti zadovoljni položajem i ako imate vlastite skijaške čizme, toplo vam ne preporučujemo da ih pričvrstite izravno na svoje skijaške čizme.

Pomoću oznake koju je stezaljka ostavila kao vodilju, napravite rupu od 4 mm u vašoj skijaškoj čizmi. Stvarna rupa može biti iznad ili ispod oznake ako je to pogodnije mjesto za rupu. Za veliku većinu skijaških čizama koje imaju dva učvršćenja na koje se drži sigurnosni remen, vanjsko pričvršćivanje je obično idealno. Ne zaboravite prije bušenja izvaditi uložak iz čizama da ih ne biste oštetili.

Ako koristite višu ili nižu točku uklapanja - ne zaboravite prilagoditi duljinu svojih teleskopskih šipki (i blokera za štapove) odgovarajućim iznosima.

Gurnite 4 mm vijak s podloškom kroz otvor na unutrašnjoj strani ski čizme. Zategnite zavrtnj i vijak pomoću ili: imbus ključa i ključa broj 10, podesivog ključa, ili klještima.

*Once you are completely happy with the position of the Clap-on Ball-Studs, and if you have your own ski boots, we strongly recommend that you fit ball studs directly on to your ski boots rather than using the clamps.*

*Using the mark left by the clamp as a guide make a 4mm hole in your ski boot. The actual hole can be above or below the mark if that is a more suitable place to make the hole. For the vast majority of ski boots that have two fixings holding the power strap in place, the outside fixing is usually the ideal. Don't forget to take the liner out of the boots before drilling to ensure you don't damage them.*

*If you use a higher or lower fitting point – remember to adjust the length of your telescopic rods (and rod blockers) by the corresponding amount.*

*Push the 4 mm screw with the washer on through the hole from the inside of the ski boot. Tighten the Ball-Stud and screw using the Allen key and either a 10mm spanner, an adjustable spanner, mole grips or pliers to hold the stud.*



Ova dodatna oprema dostupna je od većine naših Ski-Mojo distributera i iz naše internetske trgovine [www.ski-mojo.ski](http://www.ski-mojo.ski).

*These optional accessories are available from most of our Ski-Mojo dealers and from our online store [www.ski-mojo.ski](http://www.ski-mojo.ski).*

### Snowboard (opcionalno)

Za razliku od alpskog skijanja, Snowboard pričvršćivači mogu se postaviti bilo gdje na čizmama, posebno na vanjskoj strani tih čizama kako ne bi ometali pričvršćivanje čizama na snowboard.

Ako su vam čizme premekane, prijenos težine koju Ski-Mojo čini prema vašim čizmama može ga deformirati. Možemo vam dostaviti određeni konektor za snowboard. Možete upotrijebiti i komad zakriviljene plastike, poput cijevi za oluk ili odvodnu cijev, izrezan na približno 100mm kvadratnih s rupom od 4 mm izbušena u sredini (vidi uzorak dolje) i pomičite je između unutarnje i vanjske strane čizme.

*Unlike alpine skiing, snowboard Clamp-on Ball-studs can be placed anywhere on the boots, especially on the outside of these boots so as not to hinder the attachment of the boots to snowboarding.*

*If your boots are too soft, the weight transfer that the Ski-Mojo makes towards your boots may deform it. We can supply you with a specific snowboard connector. Or you can use a piece of curved plastic such as guttering or drain pipe cut to approx . 100mm square with a 4mm hole drilled in the middle (see sample below) and sliding this between the inner and outer of the boot.*



### OPCIONALNI RUKSAK SKI-MOJO – *Optional backpack*

Dostupan je ruksak posebno dizajniran za vaš Ski-Mojo koji vam omogućuje pohranjivanje bez promjene postavki.

*A backpack specifically designed for your Ski-Mojo is available and allows you to store it without changing the settings.*



### OPCIONALNI POMOĆNI REMEN – *Optional suspending belt*

Ako provodite puno vremena sa Ski-Mojo-om, ali bez skijaških cipela (ako se obučete za skijanje, ali ne stavljajte skijaške cipele dok niste putovali na staze), neoprenska potpornja za koljena mogu se pokrenuti da nakon nekog vremena kliznete niz noge.

Da biste Ski-Mojo držali gore, oko struka stavite dodatni pojaz i pričvrstite ga na remen.

*If you spend a lot of time with your Ski-Mojo on but without your ski boots on (if you get dressed for skiing but don't put your ski boots until you've travelled to the slopes), the neoprene knee supports may start to slide down your legs after a while.*

*To help hold the Ski-Mojo up, put the optional belt around your waist and attach the suspender hooks to the harness.*

## ČIČAK NA BEDRU – *Thigh Velcro*

Ova podrška nije obavezna, primijetit ćete da je ovaj čičak uklonjiv, što je dobra opcija tijekom proljeća. Ako uklonite ovaj čičak s vašeg Ski-Mojoa:

- Kada se isključi, Ski-Mojo će se odmaknuti od bedara, što nije problem ako se nosi ispod skijaških hlača.
- Čim je Ski-Mojo aktiviran, automatski će se ponovo zalijepiti za bedro.

*This support is not mandatory and you will even notice that this velcro is removable, which is a nice option during spring. If you remove this Velcro from your Ski-Mojo:*

- *When dis-engaged, the Ski-Mojo will tend to move away from the thigh, which is not a problem if worn under the ski pants .*
- *As soon as the Ski-Mojo is engaged, it will automatically stick to the thigh again.*

## KORIŠTENJE TOALETA – *When using the WC*

Pri korištenju WC-a možda ćete trebati otkopčati kopču na prednjem dijelu pojasa (i kopču na remenu ili bilo koji drugi raspored koji koristite) ili ćete također trebati odvojiti Mojo od pojasa pritiskom na gumb za otpuštanje, tako da pojas možete maknuti s Mojo-a i spustiti ga.

*When using the WC you may only need to undo the buckle at the front of the harness (and the buckle on belt or any other arrangement you may be using) or you may also need to disconnect the mojos from the Harness Clips by pressing the brass release buttons so that you can disconnect the harness from the mojos and lower it.*

## PRIČVRŠĆIVANJE KOPČI – *Tighten Rod camps*

Ako morate učvrstiti teleskopske stezaljke pomoću imbus ključa, **pazite da to učinite samo kada su ručice u zatvorenom položaju** - kako biste izbjegli prekomjerno zatezanje, jer se tada ne mogu potrgati ako prekomjerno zategnete. Ako koristite dodatne blokatore štapova (vidi dolje), stezaljke nije potrebno prečvrsto zategnuti.

*If you need to tighten the telescopic clamps using the Allen key, make sure that you only ever do this with the cam-levers in the closed position – to avoid over tightening, as they can fail if overtightened. If you use the optional rod blockers (see below) the clamps do not need to be done up tightly*



## VIDEO TUTORIAL – Video tutorial

Kompletan video tutorial koji uključuje sve korake postavljanja vašeg Ski-Mojoa dostupan je na:  
[www.ski-mojo.ski/reglages-et-manuel-dutilisation](http://www.ski-mojo.ski/reglages-et-manuel-dutilisation)

*A complete video tutorial that includes all the steps of setting up your Ski-Mojo is available on <https://www.ski-mojo.ski/en/user-guide>*



**BLOKATORI ŠTAPOVA - Rod-blockers**

Ako su izloženi mnogim dinamičkim udarcima, donji teleskopski štapovi mogu se ponekad "srušiti" tijekom jednodnevnog skijanja. Da biste sprječili da se to ne dogodi, preporučujemo vam da koristite 2 štapna blokatora. Zavrnite dvije prirubljene matice na navojnoj šipki (dovoljno je čvrsto stisnuti ruku) u željenom položaju / duljini. Otpustite teleskopsku stezaljku. Izvucite teleskopski štap. Zatim gurnite blokadu šipki u otvoreni kraj teleskopske šipke. Gurnite teleskopski štap natrag u Ski-Mojo.



*If they are subjected to a lot of dynamic impacts the lower telescopic rods can sometimes "collapse" slightly during the course of a day's skiing. To prevent this happening, we recommend that you use the 2 Rod blockers. Lock the two flanged nuts on the threaded rod together (hand tight is sufficient) at the desired position/length. Undo the telescopic rod cam-clamp. Slide out the telescopic rod. Slide the rod blocker into the open end of the telescopic rod then. Slide the telescopic rod back in to the Ski-Mojo.*

**REZERVNI DIJELOVI – Spare parts**

Svi rezervni dijelovi Ski-Mojo mogu se naručiti sa: [www.ski-mojo.ski](http://www.ski-mojo.ski)

All Ski-Mojo spare parts can be ordered from [www.ski-mojo.ski](http://www.ski-mojo.ski)



Stezaljka  
Rod clamp



Kopča  
Ball-Studs



Noga « Mojo »  
« Mojo » leg



Cičak  
Neopren



Teleskopska poluga  
telescopic rod

**VAŠE POSTAVKE – Remember your settings**

Vaš Ski-Mojo – Your Ski-Mojo : **SILVER – GOLD – BLUE** (Prekrtaj nepotrebno - *delete as appropriate*)

Postavke pojasa – Posture strap setting :



Označite poziciju krajeva čića  
Mark position of ends of velcro

Postavke jačine / Power setting : \_\_\_\_\_

Broj pokreta / number of movements

Longueur des tiges / Length setting :

Gornja nožica / upper telescopic rod : \_\_\_\_\_ cm

Donja nožica / lower telescopic rod : \_\_\_\_\_ cm

**JaKSports Ltd.**, uvoznik i ekskluzivni distributer Ski-Mojoa, jamči u ime proizvođača - Kinetic Innovation Ltd. - da vaš proizvod ne bude oštećen u materijalu i izradi tijekom dvije godine od prvotnog datuma kupnje. Ako otkrijete kvar na proizvodu pokriven ovim jamstvom, popravit ćemo ga prema našim mogućnostima pomoći novih ili obnovljenih komponenti ili ako popravak nije moguć, zamijenite stavku.

**Izuzeci:** Ovo jamstvo pokriva nedostatke u industriji tijekom korištenja proizvoda kao što je preporučeno u ovom korisničkom vodiču. Zloupotreba, zlouporaba, neovlaštena modifikacija, nepravilni uvjeti skladištenja, munje ili prirodne katastrofe. Jamstvo ne pokriva normalno habanje takvih teleskopskih šipki, kabela i neoprena.

**Granice odgovornosti:** Proizvod ne uspije, popravit će se ili zamijeniti vaš jedini regres kao što je opisano u odlomku. Nećemo biti odgovorni za vas ili bilo koju drugu stranu za štetu nastalu zbog kvara ovog proizvoda. Oštećena oštećenja uključuju sljedeće, ali nisu ograničena na njih; izgubljeni profit, izgubljena ušteda, izgubljeni podaci, oštećenje druge opreme ili slučajna ili posljedična oštećenja nastala korištenjem ili nemogućnost korištenja ovog proizvoda. Ni u kojem slučaju JaKSports SARL ili Kinetic Innovations Limited neće biti odgovorni za više od cijene proizvoda i isključujući poreze, troškove dostave i rukovanje.

JaKSports LLC i Kinetic Innovations Limited odriču bilo koja druga jamstva, izričita ili podrazumijevana. Instaliranjem ili korištenjem proizvoda

**Kako dobiti uslugu prema ovom jamstvu:** kontaktirajte nas na info@ski-mojo.fr ili +33 (0) 6 20 26 96 63, Povraćaj troškove dostave plaća JaKSports. Troškove otpreme do JaKSports SARL, ili ovlaštenog popravnog centra ili plaćanje bilo kakve carine.

*JaKSports SARL, importer and exclusive distributor of Ski-Mojo, warrants on behalf of the manufacturer - Kinetic Innovation Ltd - your product to be free from defects in material and workmanship for a period of two years from the original date of purchase. If you discover a defect in a product covered by this warranty, we will repair at our option using new or refurbished components, or if repair is not possible, replace the item.*

**Exclusions:** This warranty covers defects in manufacturing discovered while using the product as recommended by this user guide. The warranty does not cover loss or theft, nor does coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage conditions, lightning, or natural disasters. The warranty does not cover parts that are subject to normal wear and tear such as telescopic rods, cables and neoprene.

**Limits of Liability:** Should the product fail, your sole recourse shall be repair or replacement, as described in the preceding paragraphs. We will not be held liable to you or any other party for any damages or injury that result from the failure of this product. Damages excluded include, but are not limited to, the following; lost profits, lost savings, lost data, damage to other equipment or persons, and incidental or consequential damages arising from the use, or inability to use this product. In no event will JaKSports SARL or Kinetic Innovations Limited be liable for more than the amount of your purchase price, not to exceed the current list price of the product, and excluding tax, shipping and handling charges.

*JaKSports SARL and Kinetic Innovations Limited disclaims any other warranties, express or implied. By installing or using the product, the user accepts all terms described herein*

**How to obtain service under this warranty:** contact us at info@ski-mojo.fr or +33 (0)6 20 26 96 63, Return shipping costs to be paid for by JaKSports. The cost of shipping to JaKSports SARL, or an authorised repair centre or payment of any Customs clearance fees or duties are the responsibility of the user.

**PRONAĐITE NAS / FIND US ON**



[www.facebook.com/skimojomania](http://www.facebook.com/skimojomania)



[www.youtube.com/c/SkiMojoFrance](http://www.youtube.com/c/SkiMojoFrance)

**www.ski-mojo.ski**



**ski~mojo**  
PUISANCE ENDURANCE PLAISIR SKI

+33 (0)6 20 26 96 63

[info@ski-mojo.fr](mailto:info@ski-mojo.fr)

JaKSports SARL / Ski-Mojo  
657, route des Riondes - 74220 La Clusaz

**SKIJAJ  
EPIKASNIJE  
I SIGURNIJE !**

**PERFORMANSE  
IZDRŽLJIVOST  
ZADOVOLJSTVO  
SIGURNOST**

 **ski2go**  
SKI & SNOWBOARD SCHOOL

Generalni zastupnik:  
SVE ZA SPORT turistička agencija d.o.o.  
Bráće Cvijića 32, 10000 Zagreb  
OIB: 44430332290

+385 98 562 431

[dean@svezasport.hr](mailto:dean@svezasport.hr)

[info@ski2go.eu](mailto:info@ski2go.eu)

[www.ski2go.eu](http://www.ski2go.eu)

[www.facebook.com/ski2go](http://www.facebook.com/ski2go)